



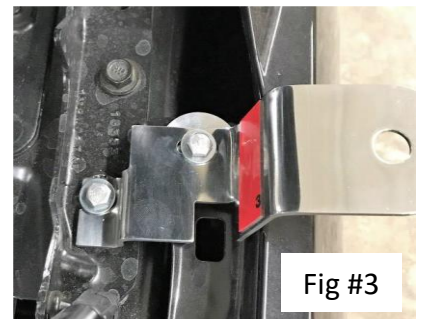

Fender Version 1

If this does not match the vehicle's fender, see next page.

1. Open hood & remove the 2 bolts from driver side fender & from hood hinge. This will require a 10mm socket. (Fig. 1)
2. Position stainless steel bracket over the 2 bolt hole locations with supplied spacer between the bracket and the fender.
3. Use one of the supplied stainless steel hex head bolts with washer to locate the hinge hole . Tighten the bolt until snug, do not fully tighten. (Fig. 2) Note: Factory bolt could be used.
4. Use the other supplied bolt and washer to locate the fender hole through the bracket and spacer. Firmly push the bracket with protective pad against the fender and fully tighten the bolt. (Fig. 3)
5. Complete installation by fully tightening the bolt in the hinge hole.

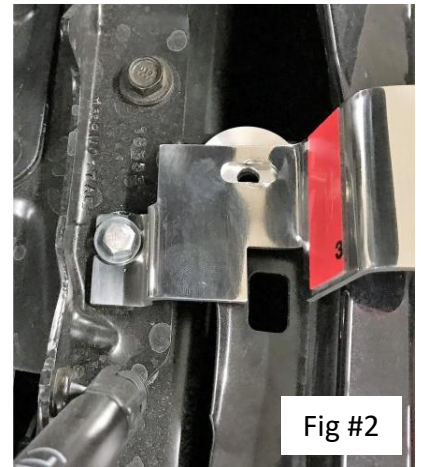



Fender Version 2

The included hardware is not needed for this version. Use the factory-installed bolt.

1. Open hood & loosen the bolt from driver's side hood hinge.
2. Position stainless steel bracket under bolt flange.
3. Complete installation by fully tightening the bolt in the hinge hole.

Note: The hinge bolt is the only point of attachment required.

